

iRiver
Model iFP Series

iRiver Limited
<http://www.iRiver.com>

Instruction Manual

iRiver
MP3 PLAYER / FM TUNER
Model iFP Series

MP3
DIGITAL AUDIO
FM
TUNER
Plays
Windows
Media™
COMPACT
disc
DIGITAL AUDIO



Firmware Upgradable

Thank you for purchasing our product.
Please read this manual carefully before use.

iRiver

FCC CERTIFICATION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICES MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

INTRODUCING THE IRIVER WEBSITE

- URL : <http://www.iRiver.com>
- Provides information on our company, products, and email addresses for support.
- Unique feature of "Firmware (system software) Upgrade" is available for download on our site. The Firmware provides new features as well as enhancements to current features. New CODECS that will be introduced in the future will be supported via Firmware Upgrade.
- Provides FAQ as well as a User's Forum.
- Register your iRiver product online so that our Customer Service is able to provide support as efficiently as possible.

iRiver Limited does not assume any responsibility for errors or omissions in this document or make any commitment to update the information contained herein.

iRiver is a registered trademark of iRiver Limited in the Republic of Korea and /or other countries and is used under license. Microsoft Windows Media and the Windows Logo are trademarks or registered trademarks of Microsoft Corporation in the United States and /or other countries.

All other brand and product names are trademarks of their respective companies or organization. All other product names may be trademarks of the companies with which they are associated.

© 1999-2003 iRiver Limited. All right reserved.


UNIQUE FEATURES

- Unique Design
- Multi-Codec Player
: Supports MP3, WMA, ASF formats.
- Firmware Upgrade
Provides the latest updated features via free downloads from our website. New formats such as AAC, MP3Pro and Ogg Vorbis, (if supported by iRiver in the future) can be added to the player with a simple firmware upgrade.
- Graphic LCD supporting Multiple Languages
: iFP Series comes with graphic LCD which can support multiple languages, including: English, French, Spanish, German, Italian, other alphabet-oriented fonts, Korean and Japanese(Katakana, Hirakana, Kanji). Over 30 languages are supported.
- FM Function
(Option : FM Tuner included only on model iFP-120T/TC, iFP-140T/TC, iFP-180T/TC, iFP-190T/TC, iFP-195T/TC)
You can easily listen to FM stations and set your favorite stations by using Auto Preset and Frequency Memory functions.
- 6 Equalizing Patterns : Normal, Rock, Jazz, Classic, U Bass, User EQ
- GUI (Graphic User Interface) Menu provides easy navigation.
- Supports up to 8 folder levels.
- Program your own playlist.


CONTENTS

1. CONTROLS	
Front View, Side View 1.....	5
Side View 2, Top/Bottom View.....	6
LCD Window.....	7
2. BASIC OPERATION	
Basic Operation.....	8~10
Installing Software on the PC.....	11~15
Downloading from the PC.....	16~17
Uploading to the PC.....	18~19
Deleting Files/Folders of the player.....	20
Deleting Files/Folders on the PC.....	21
Deleting Files/Folders of the player.....	22
Initializing memory of the player.....	23
Refresh.....	24
Making new folders.....	25
Listening to music.....	26~27
Operating the FM Tuner.....	28~31
Recording FM.....	32
Recording Voice.....	33~34
3. Useful Features	
Navigation.....	35~36
Mode.....	36~37
Program Mode.....	38~40
EQ Mode.....	41
Menu Controls.....	42~51
4. Additional Information	
Power Supply(Battery).....	52
Trouble Shooting.....	53
Precautions.....	54
Accessories.....	55
Specifications.....	56

CONTROLS

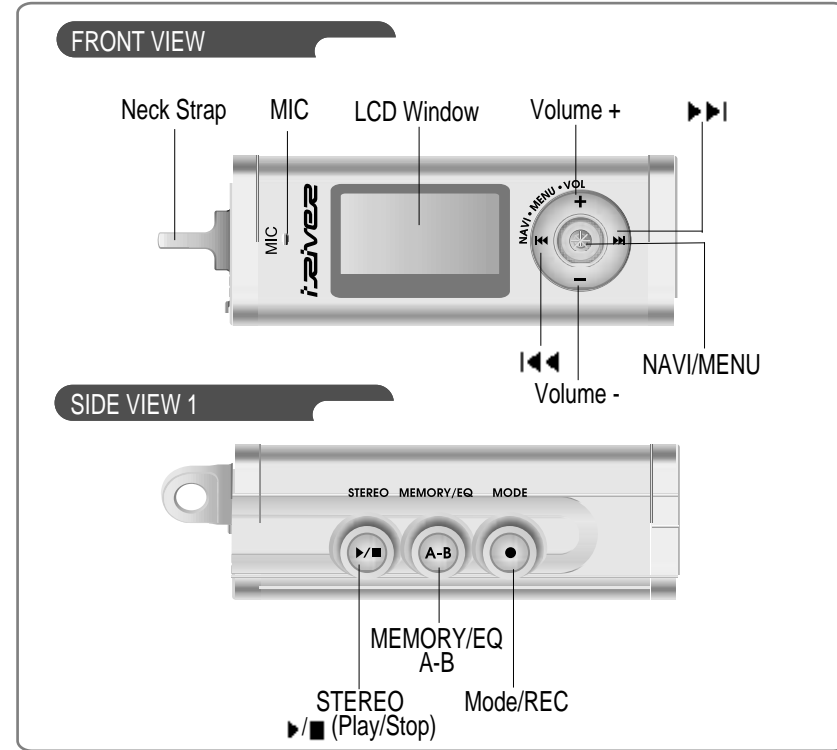


CONTROLS

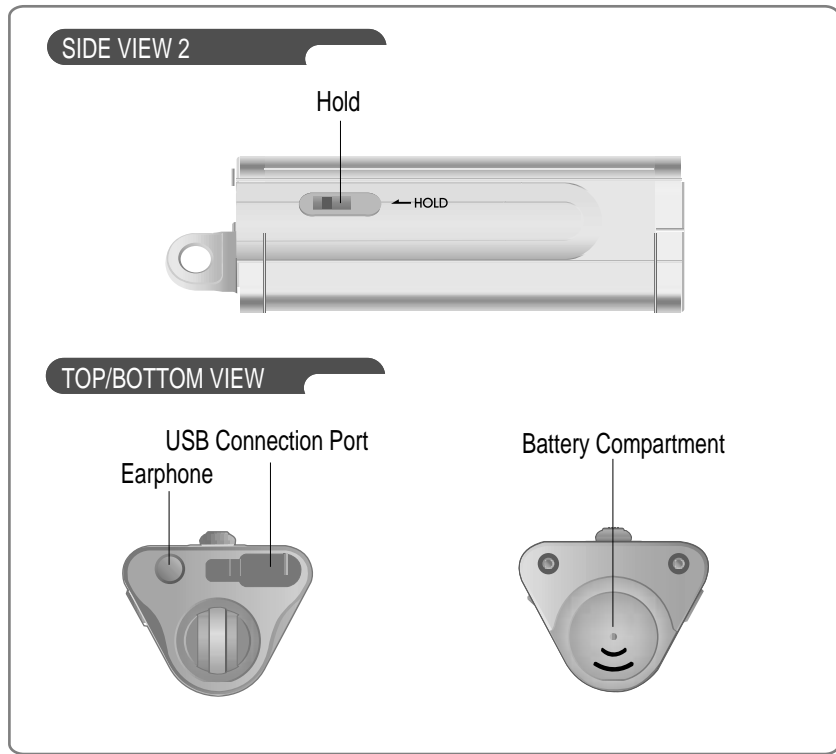


6

CONTROLS

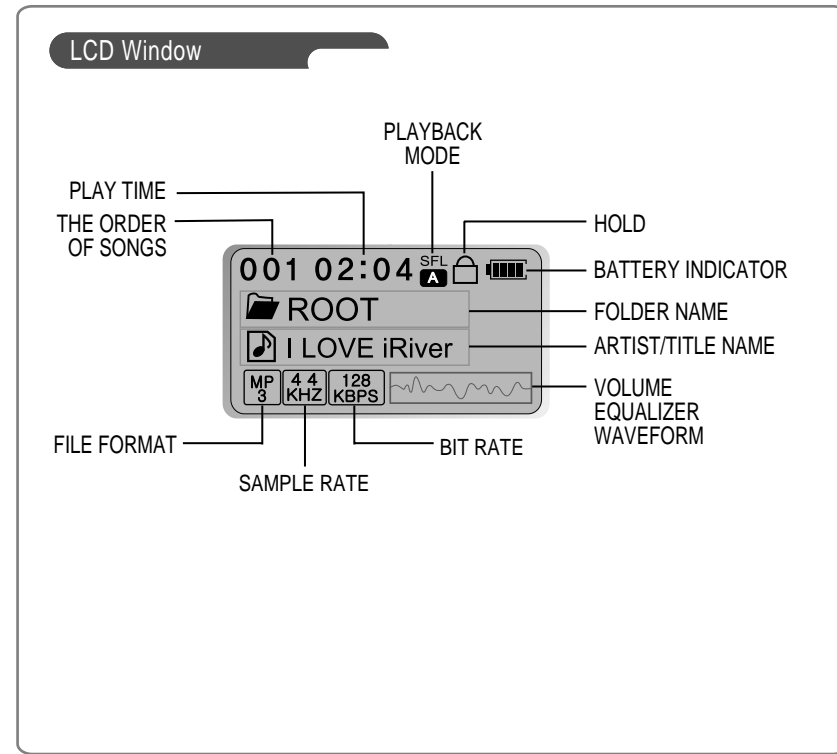

7

BASIC OPERATION

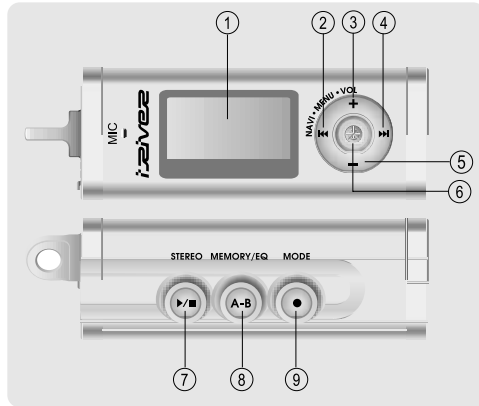

● When using Navigation




● When using Menu



1. LCD window.
2. To select the previous music for MP3 or station for FM.
3. To increase volume
4. To select the next music for MP3 or station for FM.
5. To decrease volume
6. To select NAVI/MENU function.
7. To start or stop playback for MP3, to select mode for FM or turn off
8. To select EQ mode, A-B repeat or memory stations for FM automatically.
EQ : NORMAL → ROCK → JAZZ → CLASSIC → U BASS → USER EQ
9. To select function, playback mode, or record/stop recording.

BASIC OPERATION

● BASIC OPERATION

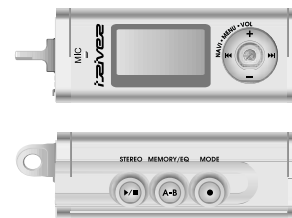

Press + on volume button to increase volume and press – on button to decrease volume.

 


Selecting FM Mode :



(Refer to p. 28)

MP3 ← FM ← VOICE Changing :



● NAVIGATION

Press NAVI/MENU button and find the desired track by pressing the VOL + or VOL – button. To select the track, press the NAVI/MENU button, >>>I or the PLAY/STOP button.

To move to the upper folder, push the I<<< switch.
If there is no upper folder, NAVIGATION stops.

BASIC OPERATION

MENU

A long press of the NAVI/MENU button will execute the menu function.

- ① Scrolling between menus : Press ◀◀ and ▶▶
- ② Exit : Push the VOL - switch down or hold down the NAVI/MENU button.
- ③ Select Function: Press the NAVI/MENU Button to down.

MODE

While an MP3 file is playing, press MODE/REC to activate selected modes, such as Repeat and Shuffle.

Press and hold the MODE/REC button:
You can select MP3 or FM or voice recording functions (Play mode is automatically activated when MP3 is selected).

INSTALLING SOFTWARE ON THE PC

- Insert the Installation CD into the CD-ROM drive. The following screen appears after inserting the CD.



- When installation is automatically not started, execute the setup.exe under the Root folder of the installation CD, and then the Manager program is automatically setup.
- The installation CD contains the following contents :
 - Device Driver
 - Manager Program
- You can save MP3 files or other types of files on the Player and other types of files except music files(MP3, WMA, AAC, ASF) on the PC by using the Music Manager Program.
- You can update the features of the player by downloading from the internet. (Log on to www.iriver.com)

- System Requirements

- Pentium 133MHz or faster	- CD-ROM drive
- USB port	- 10MB free hard disk space
- Window 98SE / ME / 2000 / XP	

INSTALLING SOFTWARE ON THE PC




Caution

Before connecting the USB cable to the player, stop playback.


1 To install "New hardware"

1 Connect the USB cable(provided) to the USB port of your computer.

Type "A" : USB port on the panel of the PC Type "B" : USB port of iFP Series
Connect the USB cable to match the direction.

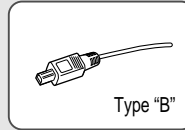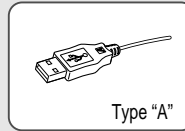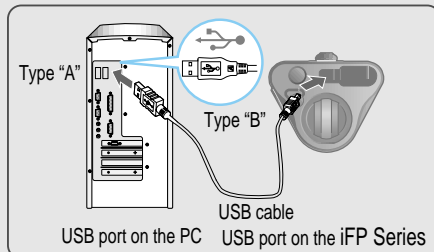

2 Turn on the player, remove the protective cover of USB port, and connect the USB cable.

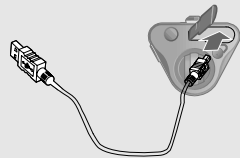


3 "USB CONNECTED" will appear on the LCD of the player.




INSTALLING SOFTWARE ON THE PC


4 The following screen appears when connecting the USB cable. Select the folder to install. Click "Next".

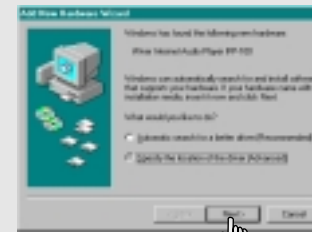


5 Click „Continue Anyway“ inspite of following alert display when installing in Window XP O.S.

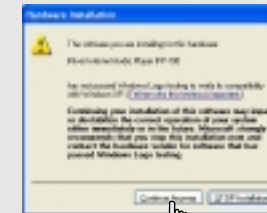

6 Click "Next".

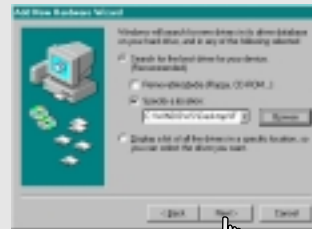


7 Select "iRiverDriver" folder to Install. Click "OK".

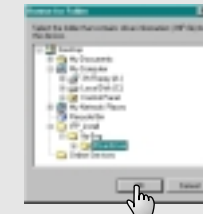


INSTALLING SOFTWARE ON THE PC

8 Click "Next".

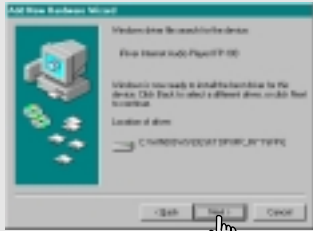


9 Click "Finish"
Complete the installation of "New hardware".

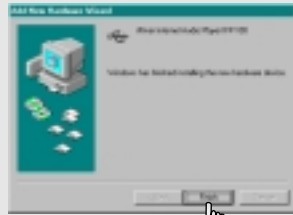


2 To install "Manager"

1 Click "SETUP.EXE" in the ROOT to start the installation. (When installation is automatically not started.)

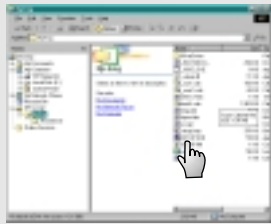


2 Click "Next".

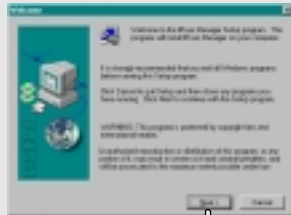

14

INSTALLING SOFTWARE ON THE PC

3 Select the folder to install.
Click "Next".
Generally assigned as "C Drive → Program File → iRiver → iRiver Manager"

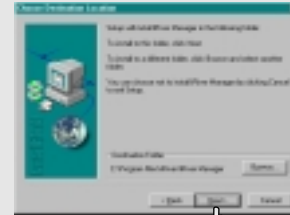

4 Click "Next".



5 Click "Finish"
Complete the installation of "Manager".




15


DOWNLOADING FROM THE PC

Activate the Manager program after connecting the USB cable between the player and the PC.

- 1 Double click the Manager icon on the PC to start the Manager program.

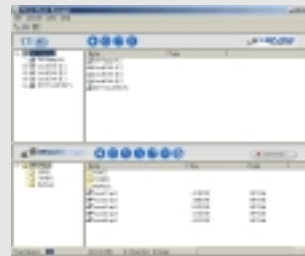

- 2 Select the folder and the file on the PC to download to the player.

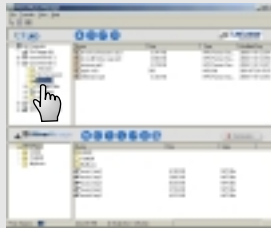


- 3 Select the folder to be saved in the player.



16

DOWNLOADING FROM THE PC

- 4 Click the "Download" icon or select "Download" in the Transfer menu to download.

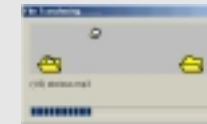



- * Files which file name is over 127 characters(Korean: 63characters) by English is not downloaded.
- * Files over 511 characters by English including path name and file names is not downloaded.
- * In ROOT folder, the numbers of files can be recorded are totally limited to 256, which includes the file names is 8 and extended file name is 3. But it is unlimited in the lower folder.

17

UPLOADING TO THE PC

Activate the Manager program after connecting the USB cable between the player and the PC.

1 Double Click the Manager icon on the PC.

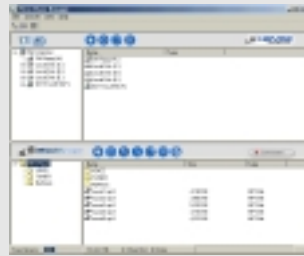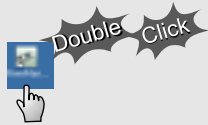

2 Select the folder to be saved on the PC.




3 Select files or folders in the player to save.



UPLOADING TO THE PC

4 Click the "Upload" icon or select "Upload" in the Transfer menu to upload.

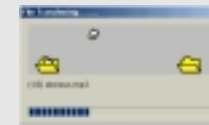

- You cannot upload general music files(MP3, WMA, ASF, AAC) from the player to the PC according to copyright laws.
You can upload files made by the player or general data files besides music files.

DELETING FILES/FOLDERS ON THE PLAYER

To delete files

- 1 Stop playback.

- 2 Click the "NAVI/MENU" button.

- 3 Select the files to delete by using VOL + or VOL -.


- 4 Click the "MODE" button.
"File delete are you sure?" is displayed on the LCD.
Select "yes" by using I◀◀ and ▶▶I to delete. Then click NAVI/MENU button.




To delete folders

- 1 Stop playback.

- 2 Click the "NAVI/MENU" button.

- 3 Select the folder to delete.


- 4 Click the "MODE" button.
"Folder delete are you sure?" is displayed on the LCD.
Select "yes" by using I◀◀ and ▶▶I to delete. Then click NAVI/MENU button.

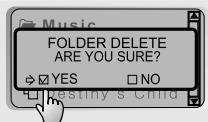


* Note : You can only delete a blank folder. In order to delete a folder, you must first delete the files in the folder.

DELETING FOLDERS/FILES OF THE PC


Activate the Manager program after connecting the USB cable between the player and the PC.

Deleting Folders or Files on the PC

- 1 After starting the "Manager" program, select the files or folders to delete.

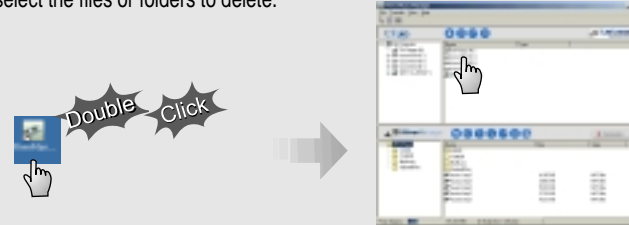

- 2 Click the "Delete" icon.

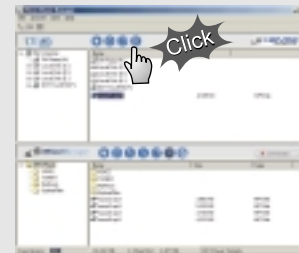

- 3 Click "yes".




DELETING FOLDERS/FILES OF THE PLAYER


Activate the Manager program after connecting the USB cable between the player and the PC.

● Deleting Folder or Files on the Player

1 After starting the "Manager" program, select the files or folders to delete.

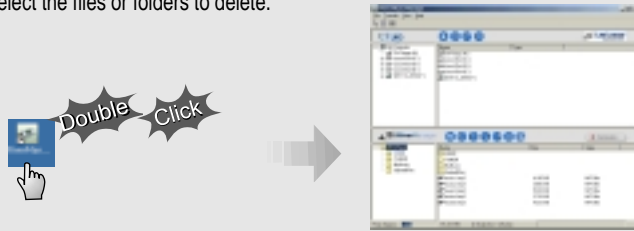

2 Click the "Delete" icon or select "Delete" in the File menu to delete.

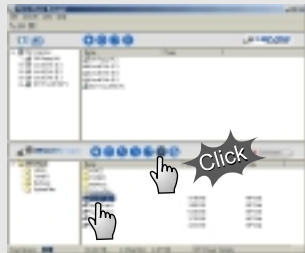

3 Click "yes".



INITIALIZING THE MEMORY OF PLAYER

● To open the Manager Program

Double click the Manager icon on the PC to open the Manager program.



2 Click "Start".



4 Click "OK".
Initializing is completed.



● To initialize the player

1 Click the "format" icon or select "format" in the file menu to format.



3 Click "Yes" to continue initialization.



REFRESH


To refresh the contents of the player

Click the "Refresh" icon to display the contents of the player.



To refresh the contents of the PC

Click the "Refresh" icon to display the contents of the PC.

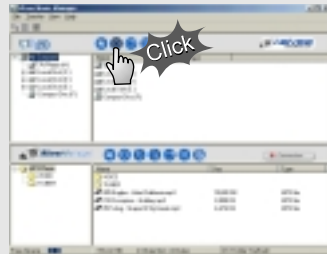


MAKING NEW FOLDERS

To make a new folder on the PC

Click the "New Folder" icon.



2 Write the name of new folder.

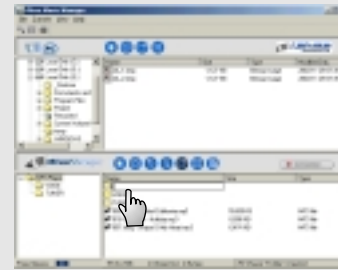

To make a new folder on the player

1 Click the "New Folder" icon or select "New folder" in the file menu to make a new folder. (Refer to p. 20-22 to delete folders)



※ You can make up to 8 folder levels. The pathname, which includes the directory and file names, is limited to 511 characters. And the file name is limited to 127 characters of English.

3 Making new folders is completed.



LISTENING TO MUSIC

1 Connect the earphones as below.



2 Put the HOLD switch to "OFF".



3 Turn the player on by pressing the Play/Menu button.



4 To select music
◀◀ : To select previous music
▶▶ : To select next music



5 To adjust the volume
+ To increase volume
- To decrease volume



- Note
- By turning Hold ON, the buttons on the player will not function.
 - In case of stop status of MP3 or standby status of Voice recording, the player automatically turns off according to the setting of "STOP POWER OFF" on the MENU.

LISTENING TO MUSIC



- To turn on the player



- To Play



- To change the function (MP3 ← FM ← Voice recording)



- To stop



- To advance



 
- To reverse



- To play the next folder



- To play the previous folder



- To fast forward



- To fast reverse



- To turn off the player



OPERATING THE FM TUNER

* FM Tuner included only on model iFP-120T / TC, 140T / TC, 180T / TC, 190T / TC, 195T / TC

- While playing MP3, Press the MODE/REC button.



The function selection picture displays on the LCD.



- Push the <<< >>> button to select FM RADIO. Press the NAVI/MENU button to confirm.



- Press the PLAY/STOP button to select Stereo/Mono.



OPERATING THE FM TUNER

* FM Tuner included only on model iFP-120T / TC, 140T / TC, 180T / TC, 190T / TC, 195T / TC

Selecting Frequency(FM 87.5MHz ~ 108MHz)

- 1) To change frequency, push the ◀◀ or ▶▶ switch to the left or the right.
(ex : 87.5 → 87.6)




- 2) Auto Scan function: To select a memorized channel, press the Navi/Menu button and find the channel by pushing the ◀◀ or ▶▶ switch to the left or the right.



- 3) PRESET Mode : To select a channel saved in memory, press the Navi/Menu button and find the channel by pushing the ◀◀ or ▶▶ switch to the left or the right.

Example)

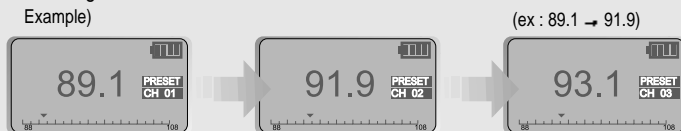


OPERATING THE FM TUNER


* FM Tuner included only on model iFP-120T / TC, 140T / TC, 180T / TC, 190T / TC, 195T / TC

Memory Function (Save channels)

 - 1) Select the channel by pushing the ◀◀ or ▶▶ switch to the left or the right.



 - 2) Push ◀◀ or ▶▶ and select the desired channels. again



- 3) Up to 20 channels can be memorized.

Save complete



- 4) Auto memory function : Automatically select channels and save them in sequential order. (It only activates while the player is not in PRESET mode)



▶ Note : Auto memory may not work within weak transmission areas.

OPERATING THE FM TUNER

* FM Tuner included only on model iFP-120T / TC, 140T / TC, 180T / TC, 190T / TC, 195T / TC

Memory delete function (Delete saved channels)

- 1) Select the channel to be deleted at preset mode.
- 2) Press and hold the memory button.



- The next channel will appear when channel delete is completed.
Push the memory button if you want to delete the next channel also.

- ▶ FM Tuner reception may vary in different areas.
- ▶ While in Preset mode, auto scan and auto memory functions are not available.
- ▶ When the player does not have any preset channels, EMPTY will be displayed at preset mode then fade out.

Press the PLAY/STOP button to turn the player off.



RECORDING FM

* FM Tuner included only on model iFP-120T / TC, 140T / TC, 180T / TC, 190T / TC, 195T / TC

To record FM

Press **MODE** the MODE/REC button during FM play.



To stop FM recording

Press **MODE** the MODE/REC button again to stop recording.



The recorded file is saved as TUNER000.REC. It is saved in the TUNER folder.



To play a recorded file

After changing to MP3 mode, select a Tuner file in the TUNER folder, press the PLAY/STOP button.

To stop recording temporarily

Press **▶/■** button during recording. Press **▶/■** button again to restart recording.

Note


Volume is not controlled during recording.

RECORDING VOICE

1 Press and hold the MODE/REC button.



2 Press the <<< or >>> switch to select Voice mode.

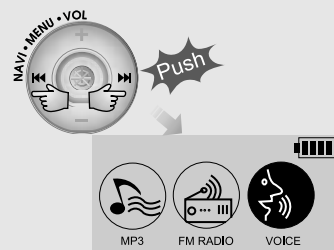

3 Press the NAVI/MENU button (or PLAY/STOP) to go to Voice recording mode.



4 Press the MODE/REC button and voice recording starts.



33

RECORDING VOICE

● To stop recording

Press the MODE/REC button.



● To play a recorded file

Press the PLAY/STOP button.



● To stop recording temporarily

Press >|/ button during recording.
Press >|/ button again to restart recording.



- The recorded file is saved as form of VOICE00.REC. It is saved in the VOICE folder under ROOT.
- If -00.00.00- is displayed on the LCD, the player's memory is full. To record, delete files and/or folders on the player in order to make some space available. (Refer to p. 20-22)

34


NAVIGATION

● Navigation is the function used to search tracks.

You can select a song by pressing the NAVI/MENU button and using the VOL +, VOL - buttons.

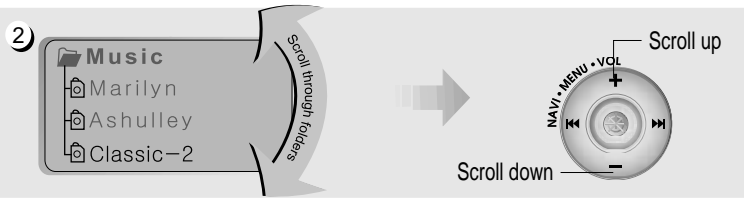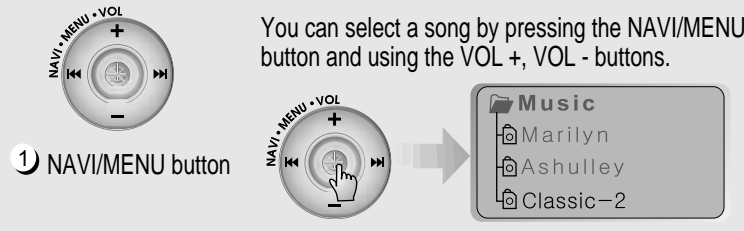

3) Select Folder or Scroll to Upper Folder

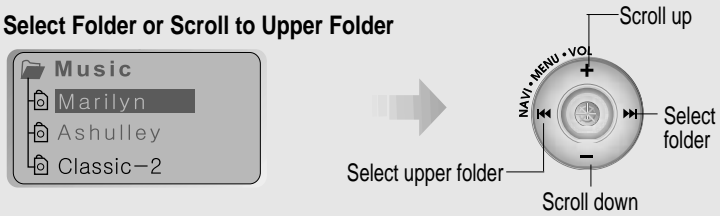

NAVIGATION


4) Select the track



MODE

You can set various Repeat and Shuffle options by choosing these selections under Mode.



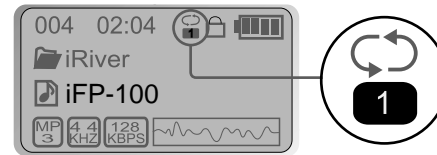

Please refer to the function controls (page 50) for user-defined configuration.







◀ When the MODE/REC button is pushed, the icon in the playback mode indicator is changed.

MODE


REPEAT

	Play a single track repeatedly.
	Play all tracks in the folder and stop.
	Play all tracks in the folder repeatedly.
	Play all tracks in the player repeatedly.

SHUFFLE

SFL	Randomly play all tracks in the player repeatedly and stop.
SFL 	Play a single track repeatedly.
SFL 	Randomly play all tracks in the folder repeatedly and stop.
SFL 	Randomly play all tracks in the folder repeatedly.
SFL 	Randomly play all tracks in the player repeatedly.

INTRO

	INTRO: Plays the beginning 10 seconds of each track in sequential order. INTRO HIGHLIGHT: Plays 10 seconds from 1 minute into each track in sequential order. For example, song A plays 10 seconds from 1 minute into the song, so the highlight ends at 1 minute 10 seconds. Then song B plays 10 seconds from 1 minute into the song, so the highlight ends at 1 minute 10 seconds, and so on with each track.
--	---

PROGRAM MODE

MEMORY/EQ



- Program mode: Create your own playlists.

Activating Program mode


- At stop mode

MEMORY/EQ





Scroll to Program mode ▶



- ▶ Program mode is activated while in Stop Mode.
- ▶ Repeat A-B is activated while in Play Mode. 

- Push the VOL +, VOL - switch to select the number to be programmed.

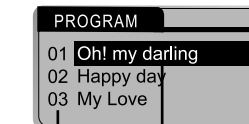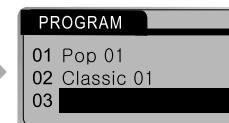


Numbers of
program list

Music name


PROGRAM MODE

- 3 After pressing the NAVI/MENU button, select the music to program by using the VOL+, VOL - switch.

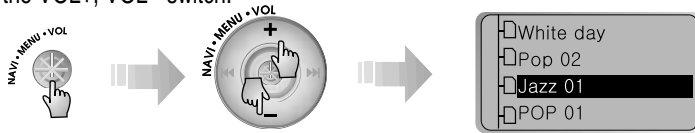

- ▶ Push the VOL + or VOL - switch to select a folder, then press the MEMORY/REC button to save all files in the folder.

- 4 Press the MEMORY/EQ button.

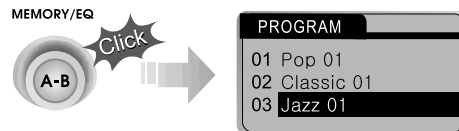

● To delete programmed files

- Press the MODE/REC button after selecting the file to be deleted. Then the program list is automatically changed.

PROGRAM MODE

● Program play

- After programming, press  to play the tracks in sequential order.




● Cancel Program Mode

- While in Stop Mode




● Interval Repeat

- Play a selected interval repeatedly

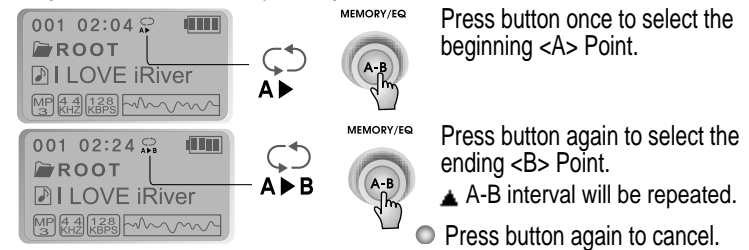


EQ MODE

EQ MODE

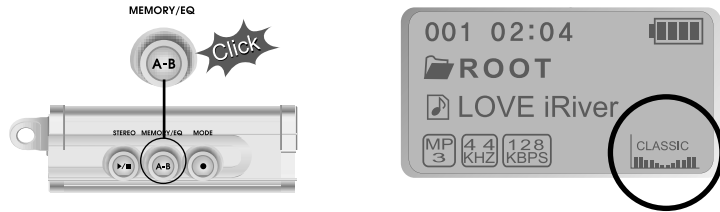

 Press and hold the MEMORY/EQ button to display the current EQ. Every time you click this button, the EQ mode scrolls in sequential order.



Note: Please refer to the Function Control (Page 51) for configuring User Defined EQ.

MENU (FUNCTION CONTROLS)

Function Control is subject to change with different firmware versions. Users can configure their own settings.

Configuration

GENERAL

- beep volume
- resume
- fade in
- language
- voice recording mode
- load default

DISPLAY

- back light
- lcd contrast
- visualization
- tag information
- time

TIMER

- sleep
- pwr off

CONTROL

- fast skip
- scan speed
- scroll speed
- sound balance
- AGC

MODE

- repeat
- shuffle
- intro


User EQ

- bass boost
- treble boost

MENU

Menu Operation

- Press and hold the NAVI/MENU button to display the menus. It is composed of 6 main menus with sub-menus.





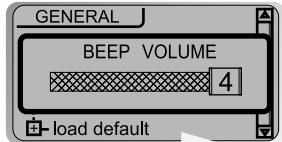


When you select a sub menu, you can set your preference to be displayed.

- Shift between Menus


◀ Press the ◀◀ or ▶▶ button to move between main menu and sub menu.

 - From Main Menu to Sub Menu

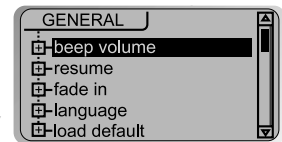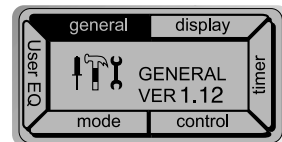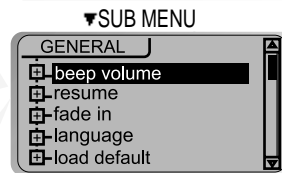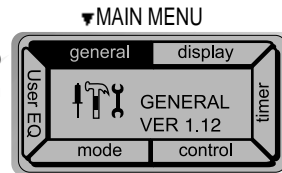

MENU

- Enter Sub Menu

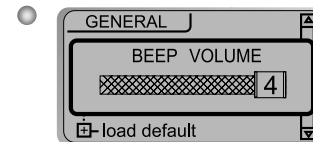

◀ Each control option is configured.



- Exit Sub Menu



- Exit Function Control mode




MENU(GENERAL)

GENERAL


● BEEP VOL

: Configure beep sound with volume level.
Set to "0" for OFF.

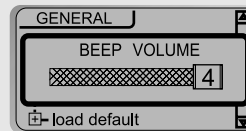


● RESUME

: When activated, the player returns to the same settings after STOP or Power OFF.

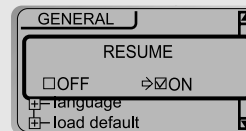


● FADE IN

: When activated, volume increases gradually at playback mode to prevent sudden loudness.

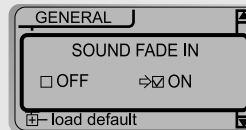

● LANGUAGE(Supports 37 languages)

: When activated, displays proper fonts for File/ Folder names and ID3 tag information.

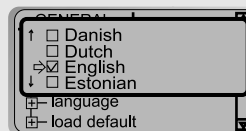

45

MENU(GENERAL & DISPLAY)


● VOICE RECORDING MODE

: The higher voice recording quality you choose, the less recordable time you have.



● LOAD DEFAULT VALUE


: Initialize to original factory setting.
Button operation order is as below.
Click NAVI/MENU(select default menu) →
◀◀ (select YES) → Click NAVI/MENU
(select YES : Initialization)

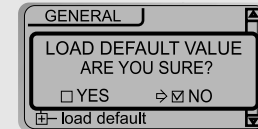

DISPLAY

● BACK LIGHT


: You can adjust the time that the Backlight stays on from OFF to 30 seconds.

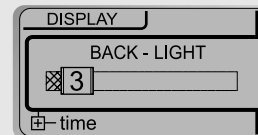

● LCD CONTRAST

: Adjust LCD contrast.

Contrast can be adjusted by using the
◀◀ and ▶▶ buttons.

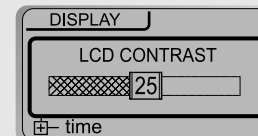

46

MENU(DISPLAY)


VISUALIZATION

: Can display the visualization of the audio signal in play mode, the elapsed time of a track, or the free space in memory.

WAVEFORM ▶ 

PROGRESSIVE ▶ 

FREE SPACE ▶ 

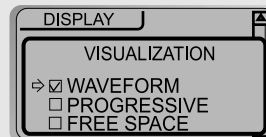

TAG INFORMATION

On : Display track with ID3 tag information
Off : Display track with filename

when you set the tag information off or on, the track is playing and the next track can be displayed with ID3 tag information.



TIME

Normal : display elapsed time.
Remain : display remaining time.

Note : If the track format is VBR, the time may not be accurate.



47

MENU(TIMER & CONTROL)


TIMER(Set Auto Power Off)

SLEEP POWER OFF

: Automatically turns power off after a fixed time (Time range can be set from 0 to 99 minutes)

Use the ◀◀ or ▶▶ button to adjust time.


▶ When the power is off, the sleep power off setting goes back to Zero setting.

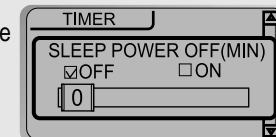

STOP POWER OFF

: Automatically turns power off at stop mode. (1 ~ 60 minutes)

Use the ◀◀ or ▶▶ button to adjust time.

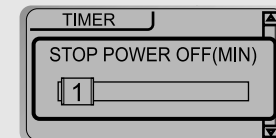

CONTROL

FAST SKIP

OFF : Skip does not activate.
10 : Playback previous or next 10th track.
Directory : Skip to previous or next directory.

This defines the operating method of short or long click of ◀◀ or ▶▶ lever.




48

MENU(CONTROL)

● FF/FR SCAN SPEED

The fast scan speed can range from 1x/2x/4x/6x.

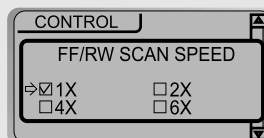


● SCROLL SPEED

Adjust scroll speed by 1x/2x/4x


Vertical : The scroll goes up and down

Horizontal : The scroll goes from the left to the right.

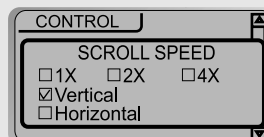

● SOUND BALANCE

Balance your sound to the right or left or keep it in the center according to your preference.

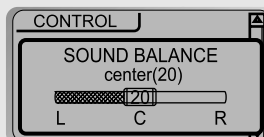


● AGC

ON : When voice recording, the recording level is automatically controlled and then the sound from a long distance is normally recorded.

The recorded sound quality may be worse than that of OFF mode.

OFF: AGC Control not activated.

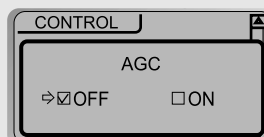

MENU(PLAYBACK MODE)



● MODE

● REPEAT MODE / SHUFFLE MODE (Page 33~34)

: A number of Repeat and Shuffle modes are available. Select the one you want by pressing Navi/Menu to enter the Mode menu.




Pushing button to enter

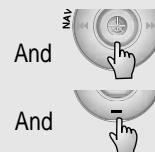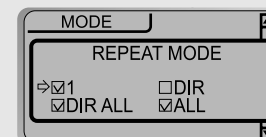

And button for selection.



And button to exit.

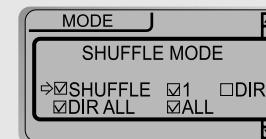

▶ Only the selected play mode will be applied when you press the MODE/REC button (For details, please refer p. 33~34)

● INTRO MODE

Intro: Plays the beginning 10 seconds of each track.

Intro Highlight : Plays 10 seconds from 1 minute into each track in sequential order. For example, song A plays 10 seconds from 1 minute into the song, so the highlight ends at 1 minute 10 seconds.




MENU(USER EQ)

User EQ

BASS BOOST

: The Bass Boost switch is from 0 to 18dB.
18dB is the maximum bass boost.

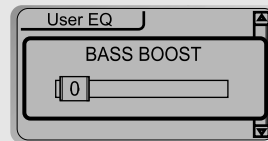

TREBLE BOOST

: The Treble boost level is from 0 to 6dB.
6dB is the maximum treble boost.




51


POWER SUPPLY(BATTERY)

Inserting a battery

1 Open the battery cover.

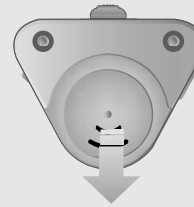


3 Close the battery cover.

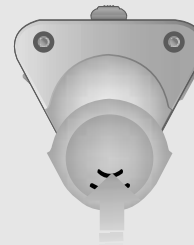

2 Insert the battery.

Be sure to match the + and - ends of the battery with the diagram inside the battery compartment.

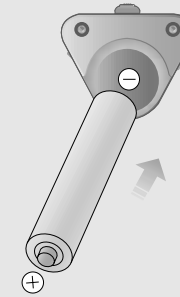

Note

- To avoid corrosion, remove the batteries if the player is not to be used for a long time.
- Remove dead batteries immediately to avoid damage from corrosion.
- When corrosion occurs, wipe the battery compartment immediately with a dry cloth and insert a new battery.

52

TROUBLE SHOOTING

Should any problem persist after you have checked these symptoms, consult your iRiver dealer or contact support at iRiver.com.

No Power	<ul style="list-style-type: none"> ● Check whether the batteries have been inserted in properly. ● Check whether the HOLD switch on the player is ON (Switch to OFF position)
No sound from earphones.	<ul style="list-style-type: none"> ● Check whether VOLUME is set to "0". Connect the earphones/remote plug firmly. ● Check whether plug is dirty. Clean the plug with a dry and soft cloth. ● Corrupted MP3 or WMA files may make a static noise and the sound may cut off. Check your files on the PC to see if they are corrupted.
Characters in LCD are corrupted.	<ul style="list-style-type: none"> ● Check out Menu ▸ Display ▸ Language and confirm whether the right language has been selected.
Poor FM Reception.	<ul style="list-style-type: none"> ● Adjust the position of the player and earphones. ● Turn off the power of other electric devices nearby the player. ● Earphones function as the antenna.
Failed download of MP3 file	<ul style="list-style-type: none"> ● Check the condition of the battery. ● Check the connection between your computer and the player to ensure that the cable is secure. ● Check the Manager program to make sure it is operating. ● Check whether the player's memory is full.

PRECAUTIONS

Safety

- Vibration experienced during walking or exercising will not affect the player. However, dropping the player or dropping a heavy object on the player may result in damage or sound distortion.
- Avoid spilling any liquid onto or into the player.
- Do not leave the player in a location near heat sources or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, or an unlevelled surface or in a car with the windows closed during excessive heat.

On Headphones and Earphones

● Road Safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

● Preventing hearing damage


Avoid using headphones/earphones at high volume. Hearing experts advise against continuously loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

● Consideration for others


Keep the volume at a moderate level. This will allow you to hear outside sound and to be considerate of the people around you.

ACCESSORIES


1) Earphone/ Earphone sponge

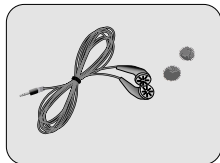


2) USB cable

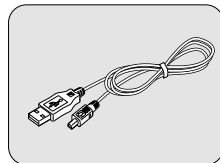



3) Installation CD

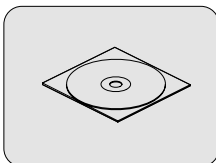

4) User Manual/ Warranty card

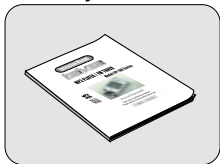

5) Battery(AA type 1EA) 6) Neck strap for carrying

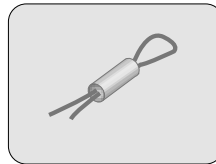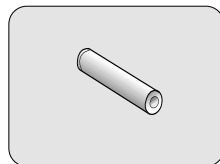

7) Carrying Case (iFP-195TC : Option)



8) Arm Band (iFP-195TC : Option)



※ Accessories subject to change without notice and may vary from image shown.

SPECIFICATIONS

☞ Distributing copies of MP3 tracks without permission is a violation of international copyright laws.

Memory	32MB	64MB	128MB	256MB	512MB
Model No	iFP-120	iFP-140	iFP-180	iFP-190	iFP-195
FM Tuner	iFP-120T	iFP-140T	iFP-180T	iFP-190T	iFP-195T
Chinese Font	iFP-120TC	iFP-140TC	iFP-180TC	iFP-190TC	iFP-195TC

☞ Memory is not upgraded.

Category	ITEM	Specifications
FM TUNER	FM Frequency range	87.5 MHz ~ 108 MHz
	Headphone Output	(L)10 mW + (R)10 mW (16 Ohm) max. Volume
	S/N ratio	50 dB
	Antenna	Headphone/Earphone-Cord Antenna
Dimension		31 x 28.5 x 82 mm(95mm : With Ring for Necklace)
Weight		Approx. 30 g (without Battery)
Battery		1 AA size Alkaline battery
Audio	Frequency range	20 Hz ~ 20 KHz
	Headphone Output	(L)10 mW + (R)10 mW (16 Ohm) max. Volume
	S/N ratio	90 dB(MP3)
	File Type	MPEG 1/2/2.5 Layer 3, WMA, ASF
FILE SUPPORT	Bit Rate	8 Kbps ~ 320 Kbps
	Tag Info	ID3 V1, ID3 V2 2.0, ID3 V2 3.0, ID 3 V2 4.0
	LCD	Full Graphic 4 Line with Backlight
Language		T Series: 36 Languages, TC Series: 37 Languages
Voice Recording		Approx. 2:15 hrs (32kbps, 32 MB) Approx. 4:30 hrs (32kbps, 64 MB) Approx. 9:00 hrs (32kbps, 128 MB) Approx. 18:00 hrs (32kbps, 256 MB) Approx. 36:00 hrs (32kbps, 512 MB)
Max. Playtime		Approx. 20 hours(128 kbps, MP3)
USB		USB 1.1
Operational Temperature		- 5 degrees ~ 40 degrees Celsius